

HSL/SL lockout status indicator

Article No.: RB 800

Latch position indicators consist of a fastening screw and a stainless steel sleeve. The unit is bolted to the removal lock of HSL and SL locks. Depending on the door thickness and lock seat, indicator lengths from 7 mm to 52 mm are available.



Properties

- Reliably visualises the locking position
- Torx screw S25
- Flexible installation length available in 5 mm increments
- 7 mm to 52 mm

Functional description

External visual indicators show the position of the bolts on the door leaf. These indicator units allow the locking position of the locks to be checked "in passing" without touching the door or lock.